



proFrame.3

Cautions:

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen gently. The screen on the Photo Frame is made of glass and can easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a memory card or USB device.

Failure to do so may cause damage to the memory card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

The Promate proFrame.3 is an ultrathin photo frame which is designed to enjoy lasting memories. The sleek facade has a touch panel for easy navigation of settings and functions. Expand its memory capacity with the most widely used memory cards – SD/MMC, MS and USB flash drive. Be informed of daily time and date with its calendar, time and alarm clock options. From playing images and movies to listening music, the proFrame.3 is a complete solution for your digital viewing needs!

Features:

- Touch menu function
- Supports JPEG, BMP and GIF image formats
- Supports MP3 and WMA audio files
- Supports MPEG1, MPEG2, MPEG4 (Divx4.0, Divx5.0, Xvid) and AVI video formats
- Memory card: SD/MS/MMC
- USB interface: High speed 2.0
- Built-in calendar and alarm clock, schedule auto on/off
- Slideshow with musical background
- Display mode: Slideshow, preview, zoom and rotate function
- Adjustable slideshow speed
- Adjustable brightness, contrast and saturation
- Screen mode 16:9 and 4:3 available
- Languages: English, German, Spanish and French language selection
- Supports screen saver mode for low power consumption
- Ultrathin size: 210mmx164mmx9mm

Packaging Check List:

 
1. 7 inch photo frame	1 piece
2. User manual	1 piece
3. Remote control	1 piece
4. AC/DC adapter	1 piece
5. Short USB Cable(usded to connect with the USB Disk)	1 piece
6. Long USB Cable(Optional)	1 piece

CONTENTS

1. Product Diagram	4
1.1 Remote Control	4
1.2 Touch Buttons.....	5
1.3 Right Side of Frame	5
1.4 Left Side of Frame	5
2. Installing & Replacing the Battery	5
3. Getting Started	5
4. Operating Instruction	6
4.1 Memory Card Choice.....	6
4.2 Picture Mode.....	6
4.3 Music Mode	7
4.4 Video Mode	8
4.5 Slideshow Mode.....	8
5. Clock / Date	9
6. Setup	9
6.1 Picture Setup.....	9
6.2 Video Setup.....	9
6.3 Clock Setup	10
6.4 System Setup	10
7. Stand Instruction	11
8. Technical Specifications	11
9. Troubleshooting Guide	12

1 Product Diagram

1.1 Remote Control

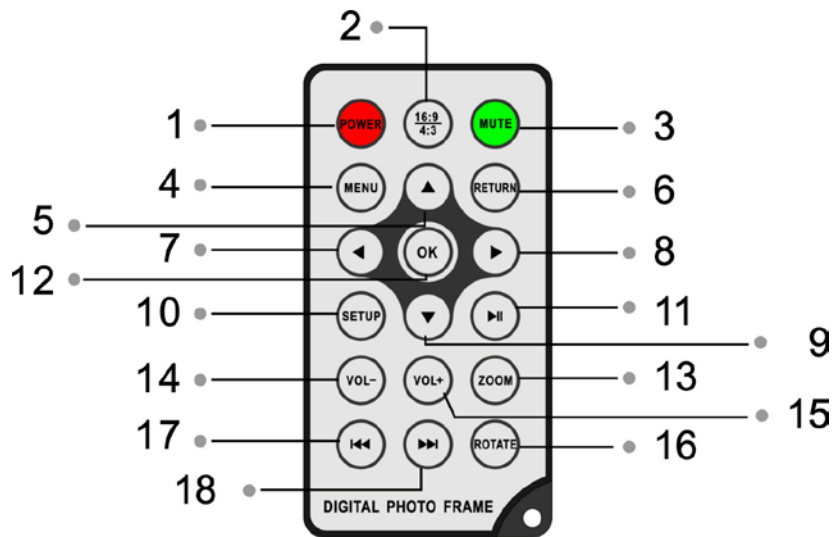

- 1) Power On/Off
- 2) 16:9/4:3 — Changes picture display ratio between these two values.
- 3) MUTE—Cancels music during music playing function.
- 4) MENU—During music/picture/video playing mode, press to access the “Info Bar”.
- 5) UP arrow—Scrolls pictures in up/down mode. Also used for making menu selections during programming and setup.
- 6) RETURN—Browse through pictures in Combo or Photo mode. Also reverts to previous menu in Music and Video modes. When in the main menu, press this button to choose the card or USB flash.
- 7) LEFT arrow—Use for menu selections in Startup, Setup, Thumbnail, Music and Video modes. Reverts to previous page when displaying folders.
- 8) RIGHT arrow— Use for menu selections in Startup, Setup, Thumbnail, Music and Video modes. Advances to next page when displaying folders.
- 9) DOWN arrow— Used for menu selection in Startup, Setup, Thumbnail, Calendar, Music and Video modes.
- 10) SETUP—Go directly to Setup mode.
- 11) Play/Pause
- 12) OK— Press to confirm selection.
- 13) Zoom—In single picture mode, changes magnification +/- 4 stops.
- 14 /15) Volume +/-— Volume adjust .
- 16) Rotate—Counterclockwise 90°.
- 17/18) Previous/Next— Move back or forward for picture and video files.

1.2 Touch Buttons

1. Power On/Off
2. Menu
3. Up Arrow
4. Down Arrow
5. OK / Play / Pause
6. Left Arrow
7. Right Arrow
8. Return

 


1.3 Right Side of Frame

1. SD/MS/MMC

1.4 Left Side of Frame

1. DC 5V(Power Input)
2. MINI USB

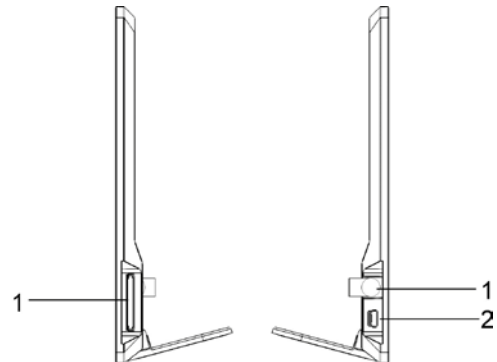

2 Installing & Replacing the Battery

Place the remote control face down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive “+” side facing you. Reinsert the tray.



3 Getting Started

3.1 Extend the photo frame bracket on the back of the frame to the widest position for greatest stability. Then plug one end of the included AC adapter into a standard 110-240VAC electrical outlet and the other end into the right side the frame.

Note: There are different positions for the photo frame stand. Please refer to "Stand Instruction".

3.2. Remove the protective film covering the LCD.

3.3. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to “Installing & Replacing Battery” if

you need a new battery.

- 3.4. Power on the unit by pressing the Power button on the remote control or on the top of the unit.

4. Operating Instruction



After turning on the unit, you will see **MEMORY**, **PHOTO**, **MUSIC**, **VIDEO**, **SLIDESHOW**, **CLOCK/DATE**, and **SET UP** icons on the screen. If you insert any card or USB device, it will be displayed in the top right corner. Please see the following interface.

4.1 Card and USB



It supports SD, MMC, MS and USB 2.0. After inserting the card or USB device, you can view picture, music and video files from the card or USB device (see the diagram). Press **OK** to select the menu item.

Note: Make sure there are supported files of pictures, music and video in the Card or USB device.

4.2 Picture Mode

Operation:



Press the **Return** to choose "**MEMORY CARD**" in the main menu. Choose **Photo**, press **OK** to enter the picture file, then press **▲▼** to highlight the play list of supported picture files. Pictures will appear on the right, press **OK** to display. When in the main menu, choose **Photo**, press **►** button to browse pictures in thumbnail mode. Use **▲▼◀▶** to highlight the picture you want to play, and press **OK** to display.



When you enter the picture file, press **▲▼** to highlight the play list of supported picture files. Press **Menu** to choose file function operation items (Copy/ Delete). Press **▲▼** to choose the function you want, and press **OK** to operate.



When the picture is playing, press **Menu** to enter "Info Bar" and then press **◀▶** to choose. Press **OK** to operate. Pressing **Menu** again will show the information of the picture in detail (size, resolution, date).

Info Bar functions as follows from left to right:

Play/pause
Stop
Next
Previous
Repeat
Rotate
Zoom

4.3 Music Mode

Operation:

Press **Return** button to choose "**MEMORY CARD**" in the main menu. Choose **Music**, press **OK** to enter the music browser interface. Press **□□□** to select.



When you enter the music file, press **▲▼** to highlight the playlist of supported music files. Press **Menu** to choose file function operation items (Copy/Delete). Press **▲▼** to choose the function you want, and press **OK** to operate .



 
When the music is playing, there will be "Info Bar" on the interface. Press ◀▶ to choose one of the items, press **OK** to select.


Info Bar functions as follows from left to right:

Repeat
Previous
Next
Play/pause
Fast rewind
Fast forward

4.4 Video Mode

Operation:

 Press **Return** button to choose "**MEMORY CARD**" in the main menu. Choose Video. Press **OK** to enter the Video browser interface. Press  to select.

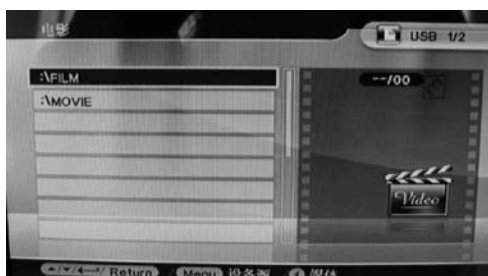

When you enter the Movie file, press ▲▼ to highlight the playlist of supported picture files. Press the **Menu** to choose file function operation items (Copy/Delete). Press ▲▼ to choose the function you want and press **OK** to select .



When the movie is playing, press the **Menu** to enter "Info Bar" and then press ◀▶ to choose one of the items, press **OK** to select.

Info Bar functions as follows from left to right:

Play/pause
Stop
Next picture
Previous picture

 
Fast forward
Fast rewind
Repeat
Volume

4.5 Combo Mode- Play both music and pictures

Press **Return** to choose "**MEMORY CARD**" in the main menu, then choose **SLIDESHOW**. First you will be in the picture selection mode. Scroll through the choices with and select with **OK**. Then you will be in the music selection mode. Scroll through the music files and choose with selection with **OK**, then play.

Note: The Slideshow function only works with MP3 files.

5. Clock / Date

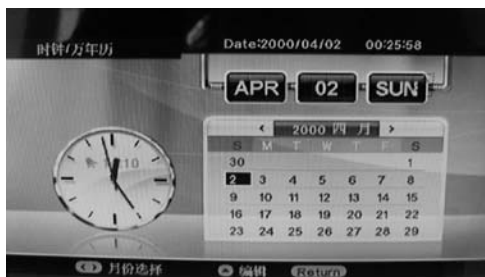


In the main menu, use **▲▼** to highlight the Clock Icon. Press **OK** to find Calendar with Clock. Press **Return** to go back to main menu. Please refer to the following illustration:

6. Setup

In the main menu, use **▲▼** to highlight Setup and press **OK**. Please refer to the following diagram. Use to choose the item you want to set up. Please find the details in the following information.

 6.1 Picture Setup

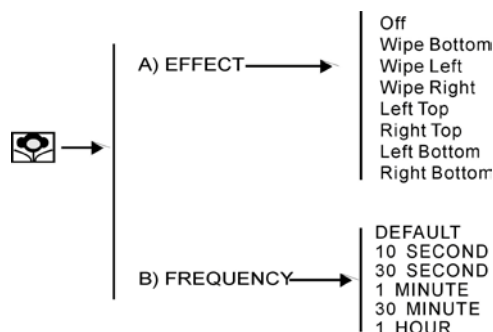

A. Effect : Allows you to set picture slideshow mode (Off, Wipe Bottom, Wipe Left, Wipe Right, Left Top, Right Top, Left Bottom, Right Bottom).

B. Frequency: Allows you to choose the slideshow intervals from 10 seconds, 30 seconds, 1 minute, 30 minutes and 1 hour. Press to highlight the one you want, and press **OK**.

6.2 Video Setup



Brightness: Use the to select between 0 (lowest) and 12 (highest).

Contrast: Use to select between 0 (lowest) and 12 (highest).

HUE: Use to select between 6 (most color) to 6 (least color).

Saturation: Use to select values between 0 (lowest) and 12 (highest).

Sharpness: Use to adjust.

6.3 Clock Setup



 
Date: Press , to set, and **OK** to select.

Alarm: Press to highlight the icon, and press **OK** to set the alarm time. Use the to set the time and press **OK** to select. To turn off, highlight the icon and press **OK** to toggle On/Off.

Time: Press , to set and **OK** to select.

Power On/Off: Press to highlight the time setting and press **OK**. Use to set the time and press **OK** to select. Select and highlight OFF and press **OK** to turn off the "Auto Power On" function.

6.4 System Setup

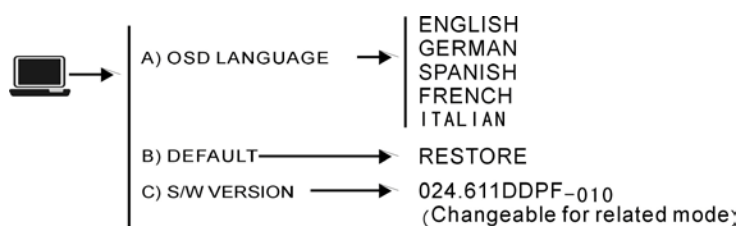

A. OSD Language: Allows you to set up the language. In the System Setup menu, press to highlight OSD Language Icon, press again to enter the submenu to choose the language and press **OK**.


B. Default: Allows you to recover the original setup by pressing to highlight; choose Restore and press **OK**.

C. S/W Version: Allows you to find the current version of the software.

7. Stand Instruction

Insert the bracket into the slot of the photo frame. Please check and make sure the stand is locked in place before standing the photo frame up.

Please refer to the illustration shown below

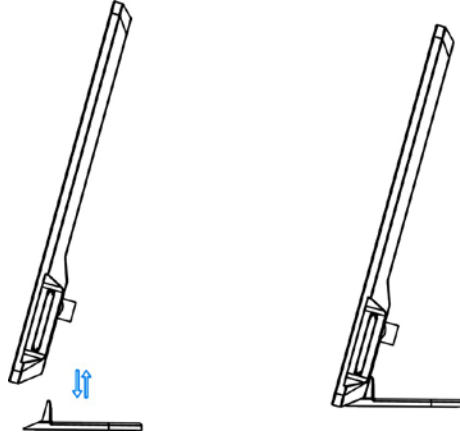 

8. Specifications

- TFT LCD: 7 inch LCD (16:9) panel
- Screen resolution: 480*234 Pixel
- Brightness: 250 cd/m2
- Contrast: 300: 1
- Photo file formats: JPEG,BMP and GIF
- Audio file formats: MP3 and WMA
- Video file formats: MPEG1, MPEG2, MPEG4 (Divx4.0,Divx5.0, Xvid) and AVI
- Full memory cards supports: MS/SD/MMC
- USB connection: USB2.0 HOST
- Supports software upgrade

9. Troubleshooting Guide

No power

Please check whether the plug is connected properly.

Remote control not functioning

Please check if the battery still has power. Replace if its necessary.

Cannot read the memory card or USB drive

Please confirm whether there is a file saved inside the memory card or USB drive.

Cannot play a file

Please check if the file format is compatible with the player.

Display too bright or too dark

Please adjust the brightness or contrast in the setup menu.

The color is light or no color

Please adjust the color and contrast setup.

No sound

Please check whether if the volume is correct and the player is not in Mute mode.